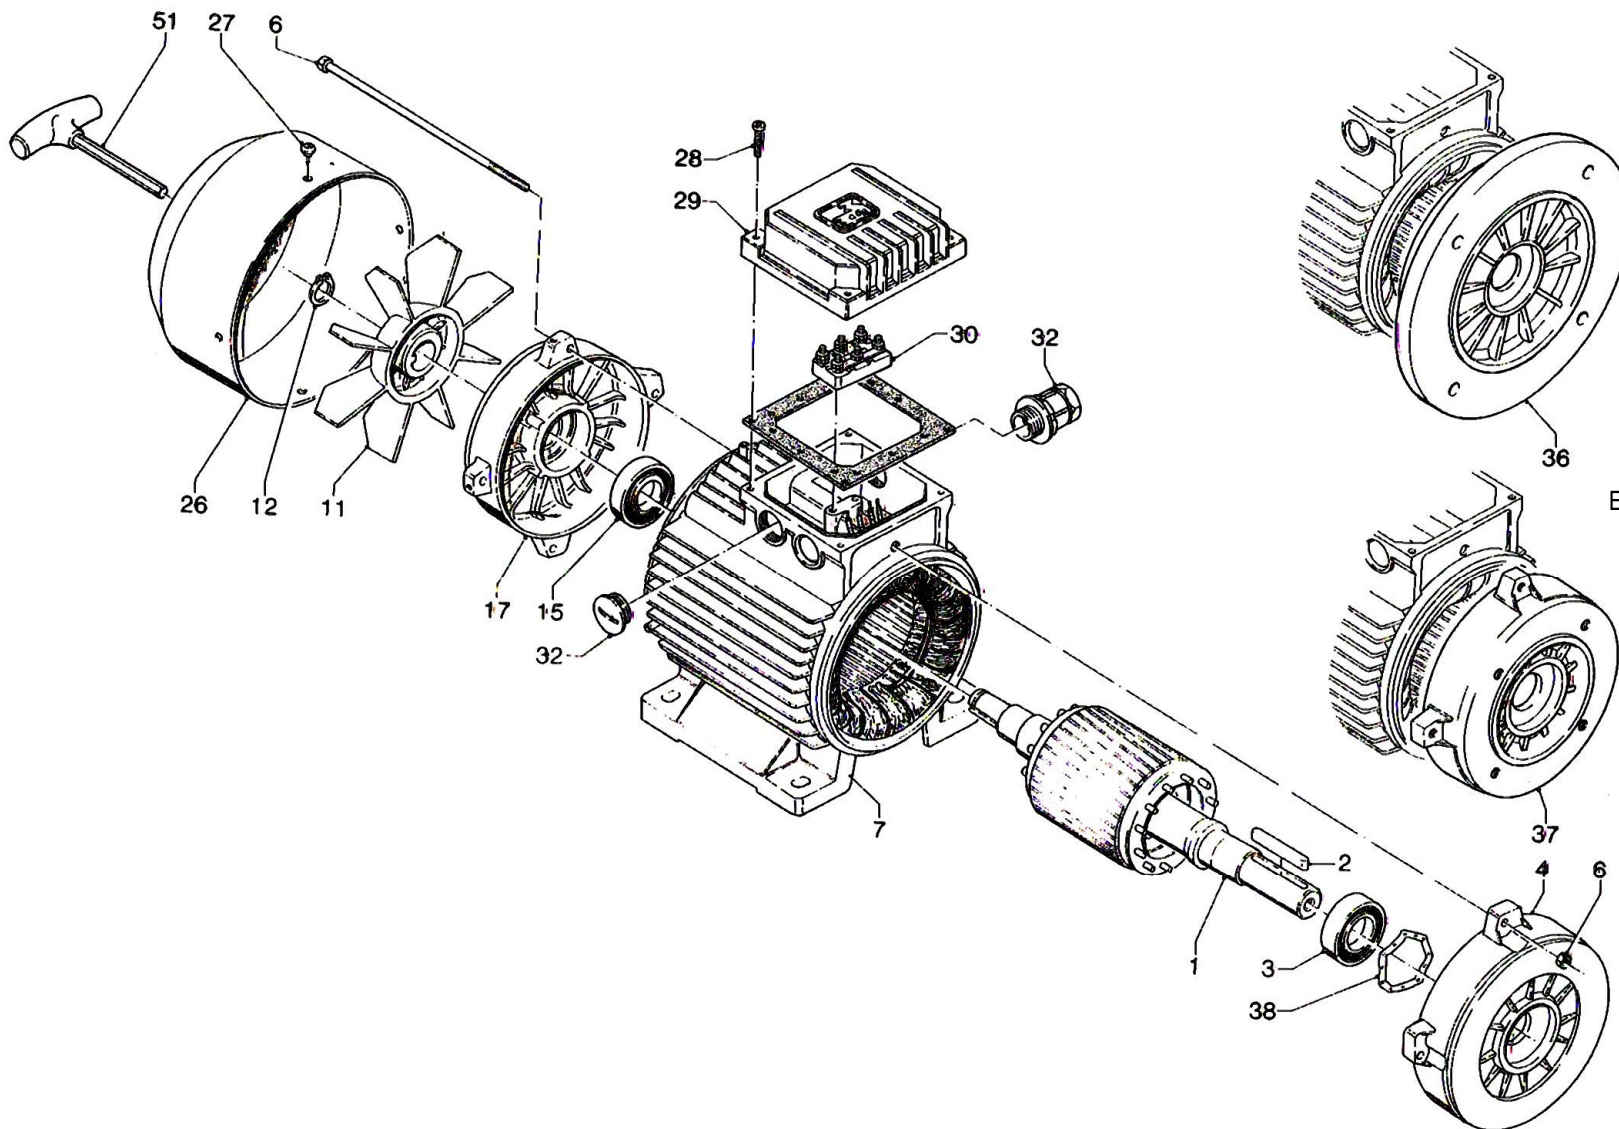


Spare parts


- | | |
|------------------------------|-----------|
| Complete Rotor | 1 |
| Key | 2 |
| Bearing Drive End Side | 3 |
| Endshield Drive End Side | 4 |
| Tire rod Assembly | 6 |
| Stator Frame | 7 |
| Fan | 11 |
| Fixing Hub Snap Ring | 12 |
| Bearing Non Drive Side | 15 |
| Endshield Non Drive End Side | 17 |
| Fan Cover | 26 |
| Fan Cover Screws | 27 |
| Terminal Box Screws | 28 |
| Terminal Box | 29 |
| Terminal Board | 30 |
| Cable Gland | 32 |
| Flange B5 (Flange Mounting) | 36 |
| Flange B14 (Face Mounting) | 37 |
| Elastic Washer | 38 |